


SKIP*HOP®

307075-01

FARMSTAND grow & play activity gym

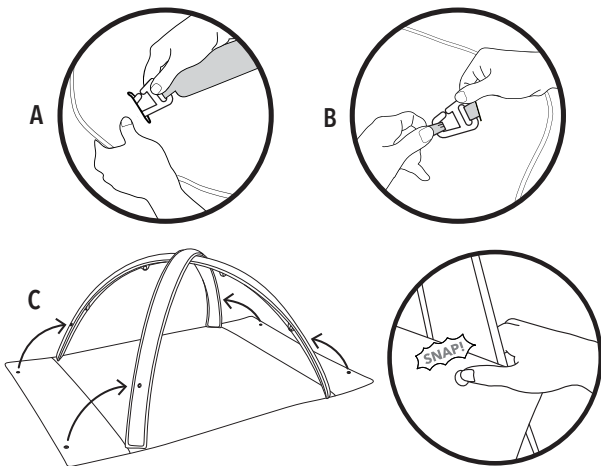

EN Please retain this information for future reference. Requires assembly by an adult.

ASSEMBLY:

1. Place mat flat on floor with pattern facing up, and place "arches" on top.
2. Select any plastic hook (at ends of each arch) and insert into the nearest slot on mat (A).
3. Reach under mat and put the hook through the fabric loop on the bottom of the mat (B).
4. Repeat on opposite side of the mat to complete one arch, then twist arches into "X" and repeat with second arch.
5. Playmat sides fold-up and snap onto arches. (C).